

LCD series Safe instruction manual

Open your safe: For the first time, Pl open the safe by the emergency system.

Emergency system

Open the emergency lock hole cover on the right of the panel, plug in the emergency key, turn it to the left and turn the knob clockwise at the same time, the safe will open. During the normal operation, if the safe is out of battery, the user forgets the code or the electronic system malfunctions, you can also open the safe by the emergency system

Install battery

Open the battery box cover at the back of door, install the battery as required (4XAA battery)

Setting and modification of personal code

When the safe is open, press the Start key, the LCD screen will display“-----”,then input any 6 digits code you want and press the red button inside the door. After the LCD screen displays “IN”, it will display the 6 digits code you input, the music sound sings, it indicates the finishing of new personal code setting (the old personal code disappears at the same time)

Setting and modification of management code

When the safe is open, press the red button inside the door, the LCD screen will display“-----”,then press “START” button and input any 6 digits management code you want and After the LCD screen displays “IN”, it will display the 6 digits code you input, the music sound sings, it indicates the finishing of new management code setting (the old management code disappears at the same time)

Indication of error

If you input wrong 6 digits code, the LCD screen will display “ERROR” and there will be beep sound at the same time. If you input the wrong code for 5 times, the system will be in locked condition at around 2 minutes 30 seconds, there will also be continuous beep alarm sound.

Low-battery Indication

Press “START” button or the red button, if the LCD screen shows “LO-BAT”, it means the battery is in Low-battery condition, please the battery in time.
